



IceSLEET X7 Dual

Quick Start Guide

Iceberg-Thermal.com

Box Content

A



x 1

B



 
x 4

C




x 1

D




x 1

 E



x 1

 F



x 1

AMD

G



 
x 4

H



x 4

I



x 2

 
INTEL

J



x 4

K




x 2

L



x 4

 M



x 1


AMD

AM4


B



 I

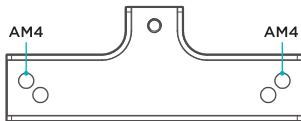

G

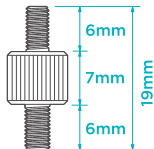 


AM3(+)/AM2(+)/FM2(+)/FM1


B



 I

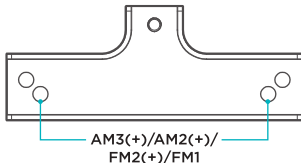


H

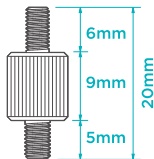 


AMD

 AM4

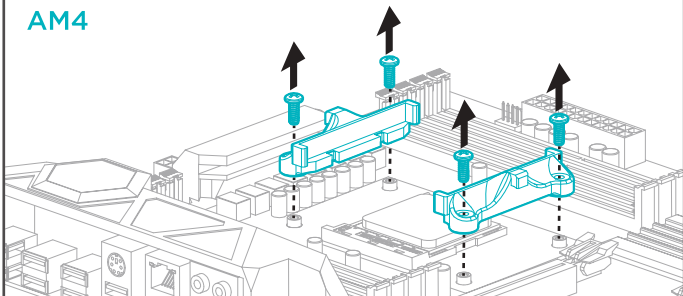

AM3(+)/AM2(+)/ FM2(+)/FM1

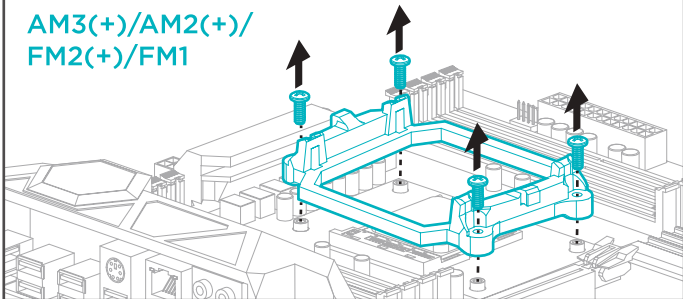 


INTEL

LGA 2066/2011(-v3)


B



 K

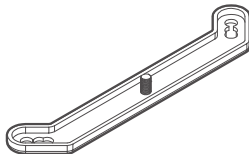

J

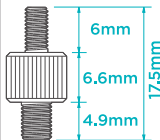 


LGA 1200/115X/1366/775

B



 
K



L




 M




INTEL

 K

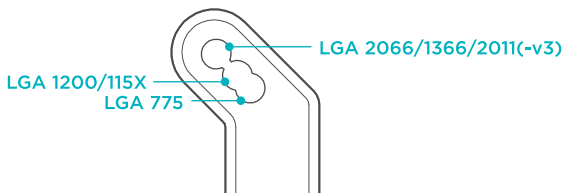


M

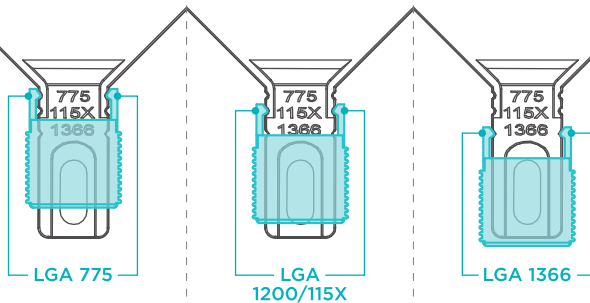 


INTEL

 LGA 2066/2011(-v3)

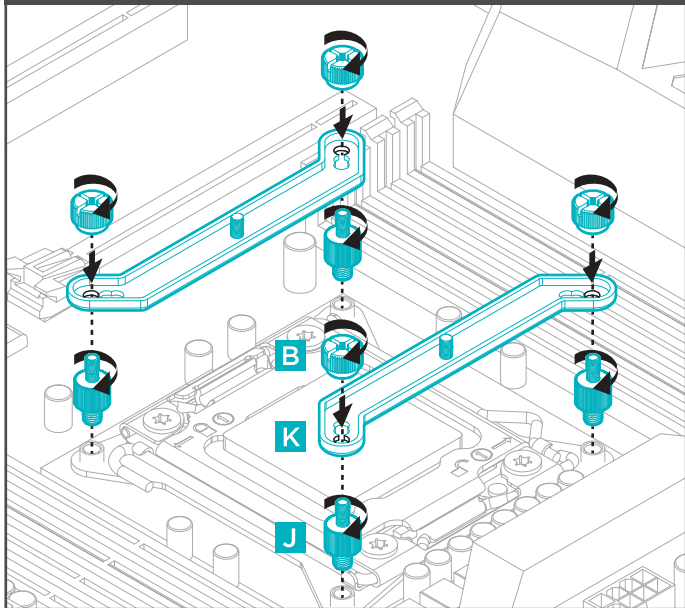


INTEL

 LGA 1200/115X/1366/775

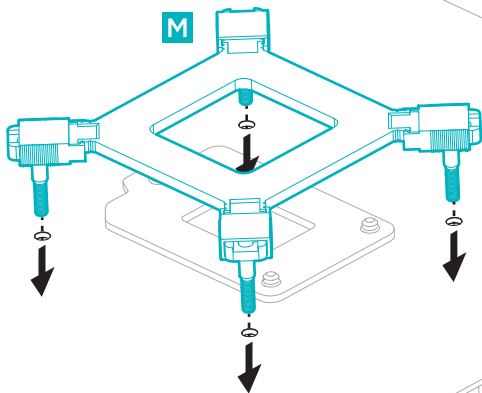


INTEL

 
LGA 1200/115X/1366/775

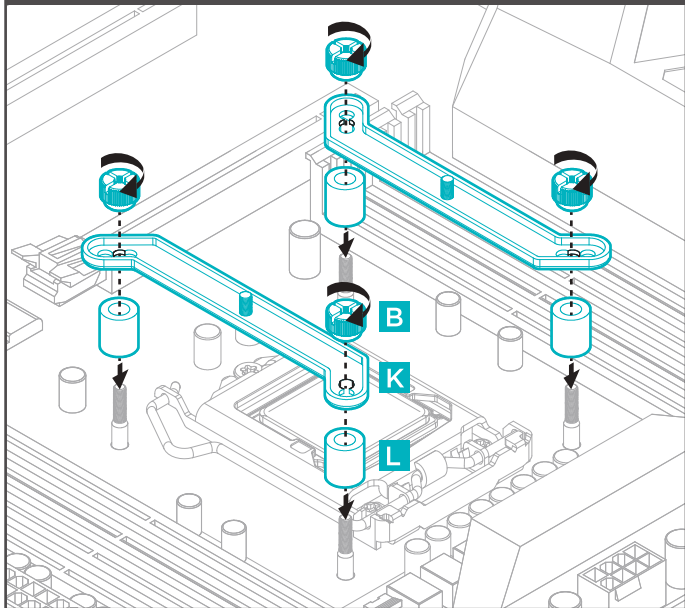

 
Step 1

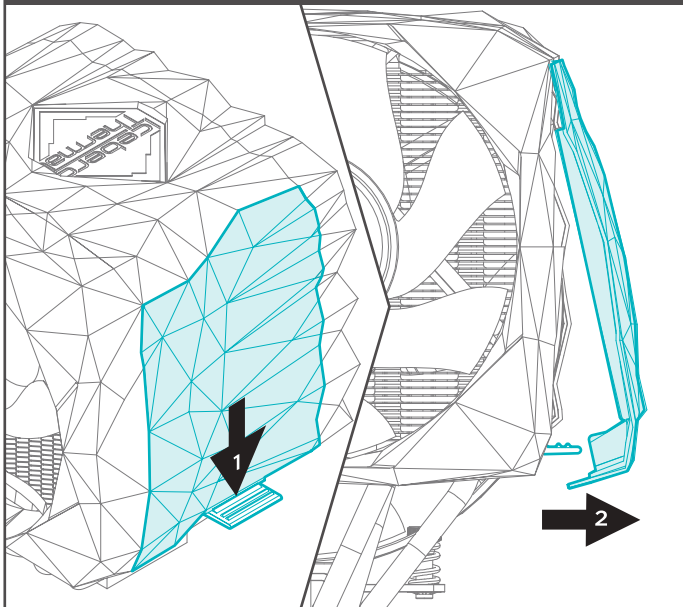

 
Step 2

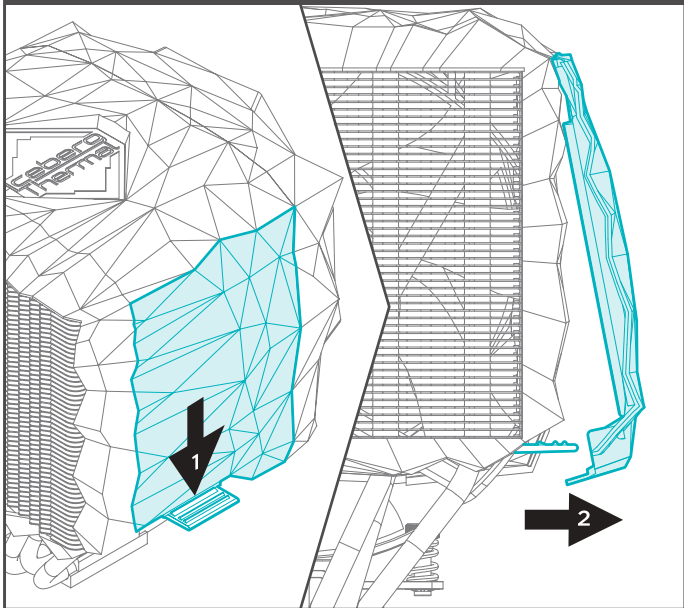

 
Step 3

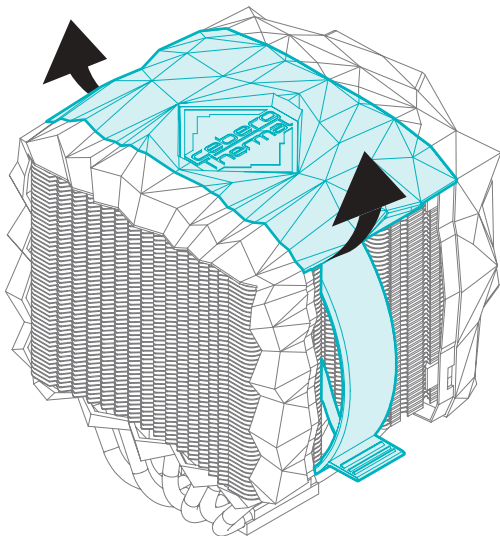

 
Step 4

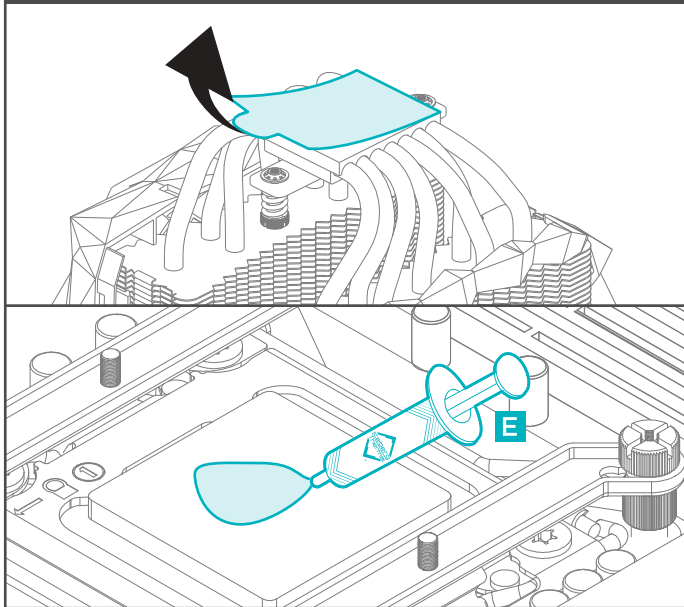

 
Step 5

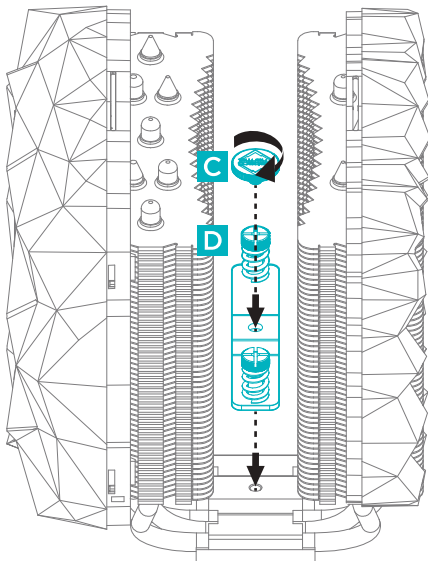

 
Step 6

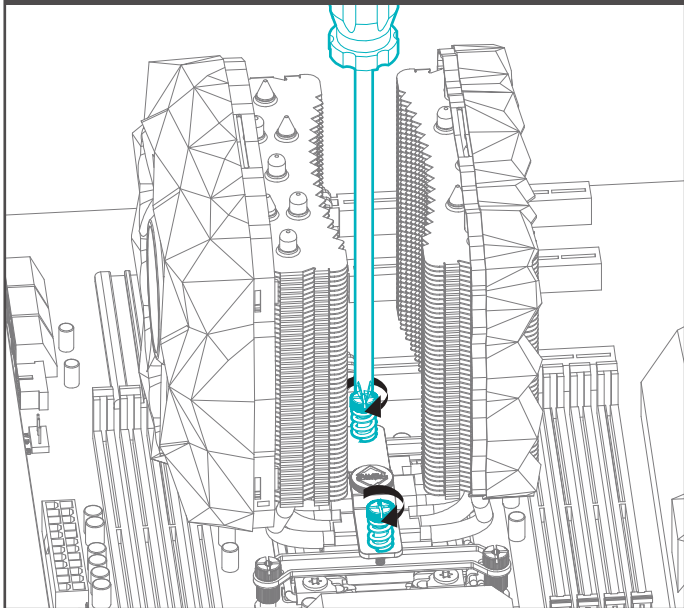

 
Step 7

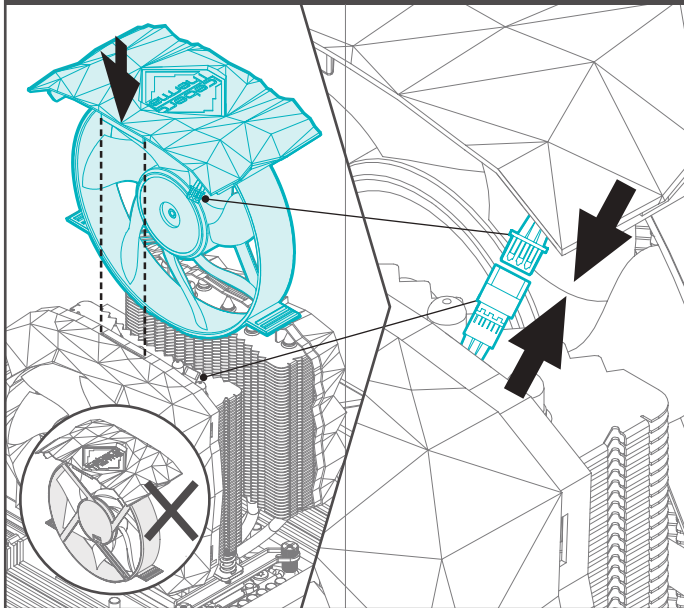

 Step 8

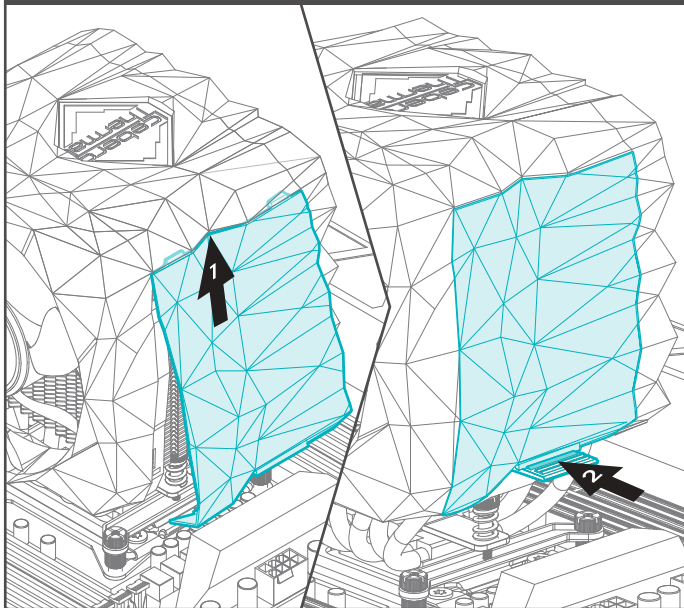

 Step 9

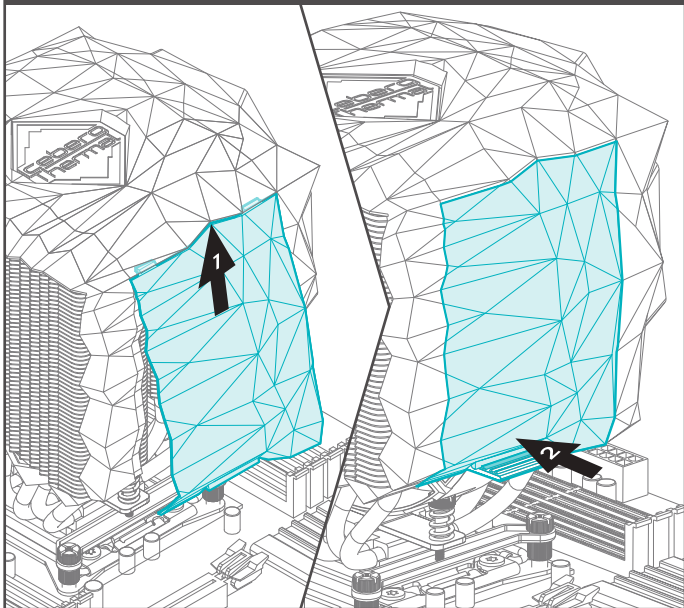

Step 10

