




Ice**SLEET** X6

Quick Start Guide

Iceberg-Thermal.com

Box Content

A

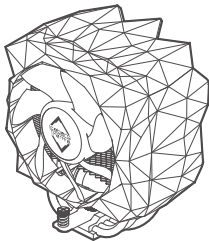

x 1

B



x 4

C



x 1

AMD

D




x 4

E



x 4

F



x 2


Intel

G



x 4

H




x 2

I



x 4

J



x 1


AMD

AM4

B




F



AM4

AM4

D

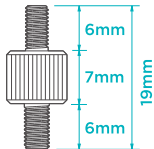

6mm

7mm

6mm

19mm

AM3(+)/AM2(+)/FM2(+)/FM1

B




F



AM3(+)/AM2(+)/
FM2(+)/FM1

E

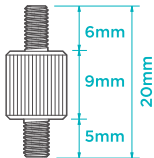

6mm


9mm

5mm


20mm

AMD


AM4

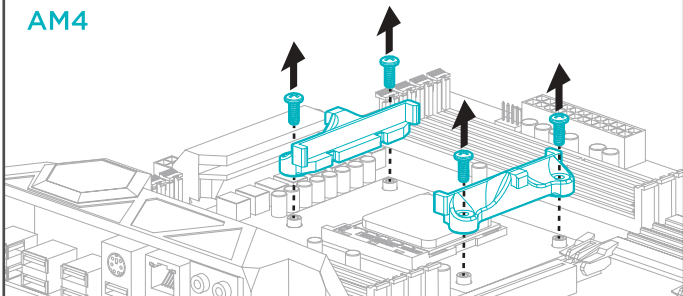

AM3(+)/AM2(+)/ FM2(+)/FM1

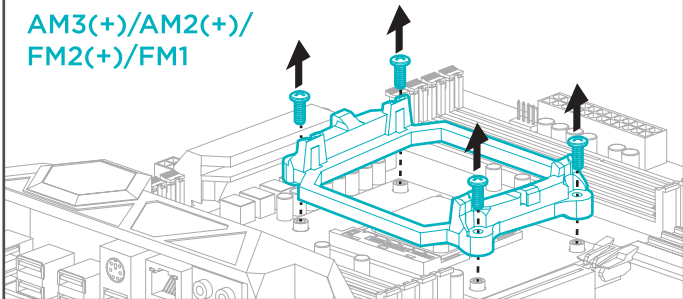

AMD

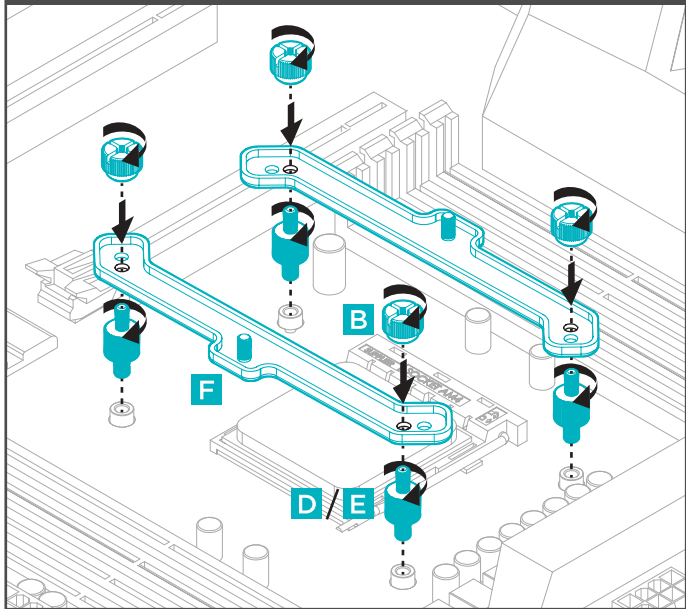


INTEL

LGA 2066/2011(-v3)


B



H

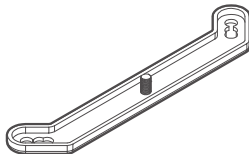

G

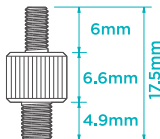


LGA 1200/115X/1366/775

B




H



I




J




INTEL

H

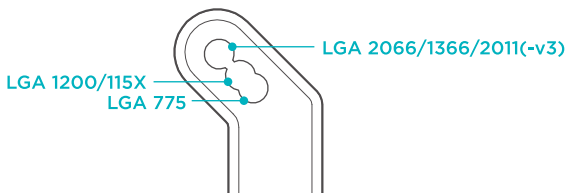


J

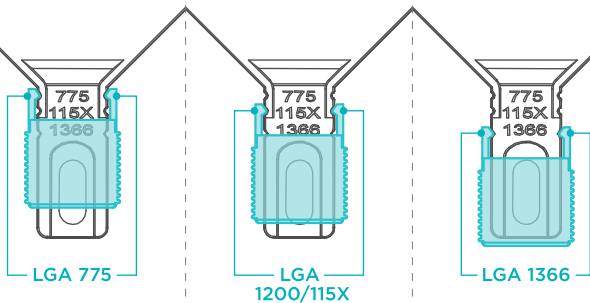


INTEL

LGA 2066/2011(-v3)

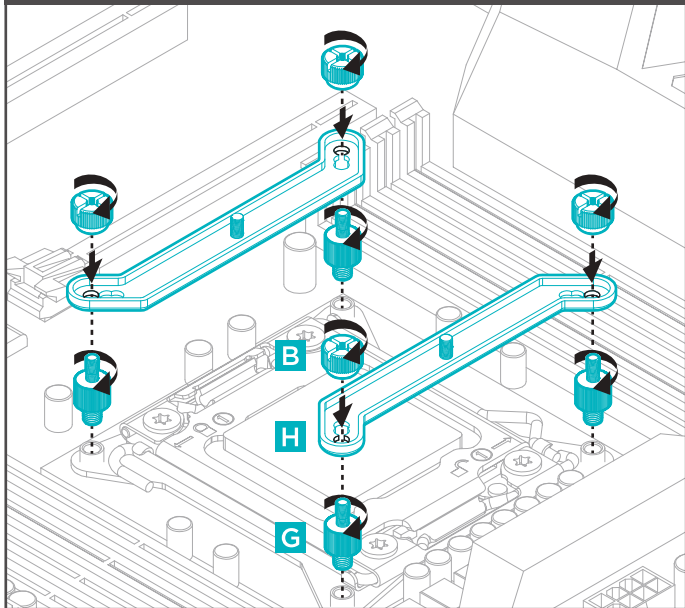


INTEL

LGA 1200/115X/1366/775

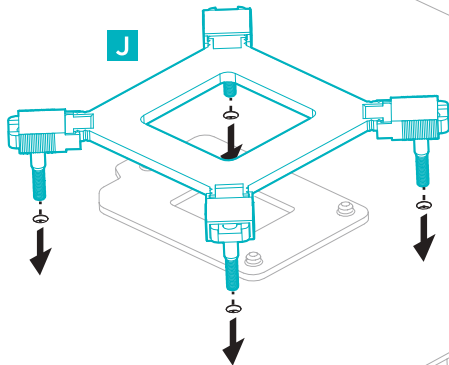


INTEL


LGA 1200/115X/1366/775

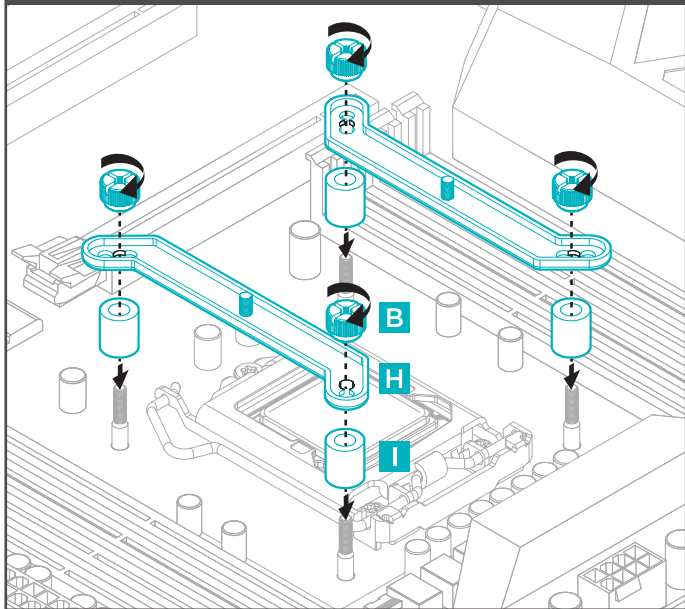


Step 1

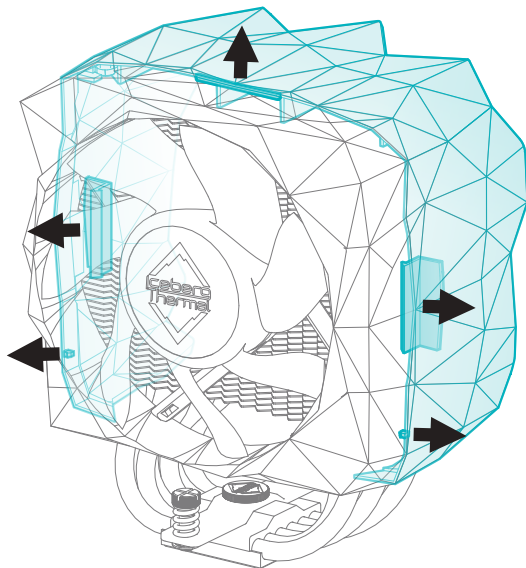


Step 2

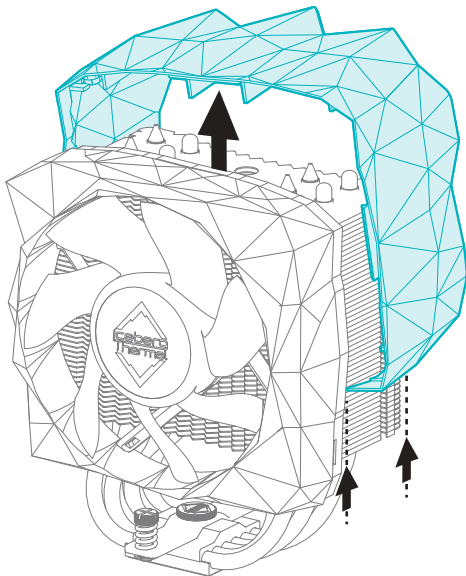


Step 3

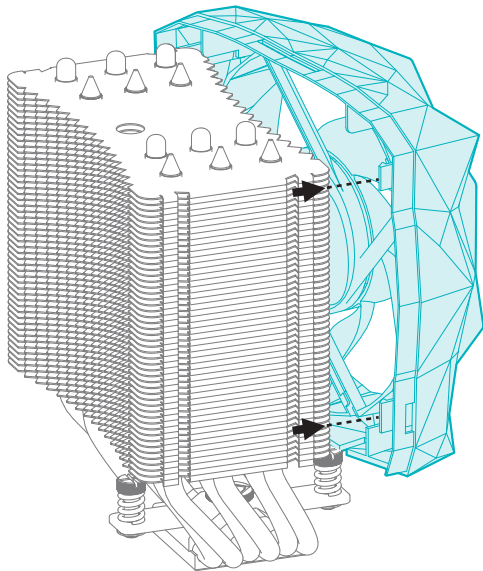


Step 4

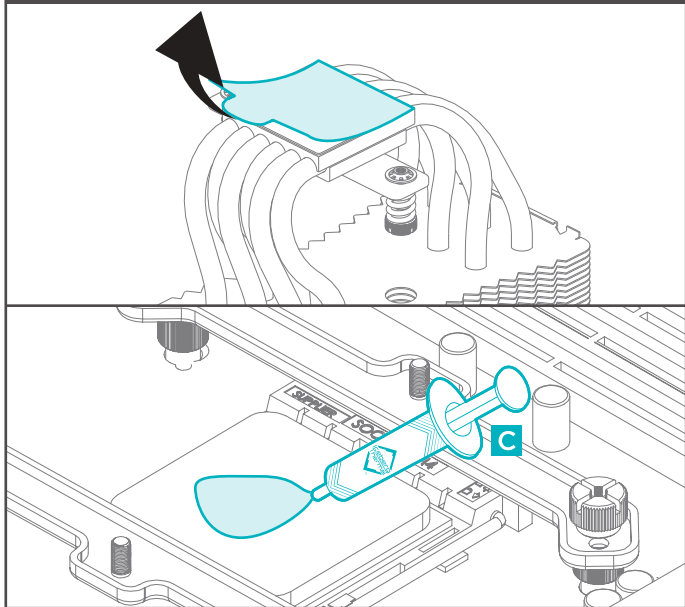


Step 5

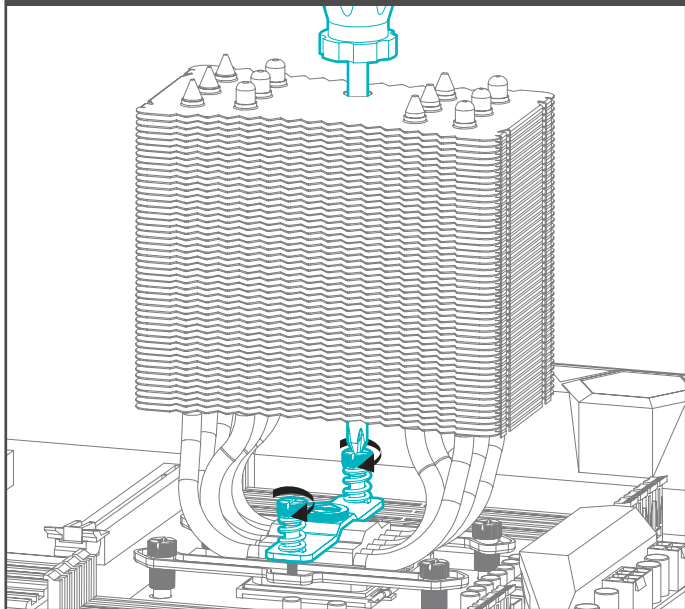

Step 6

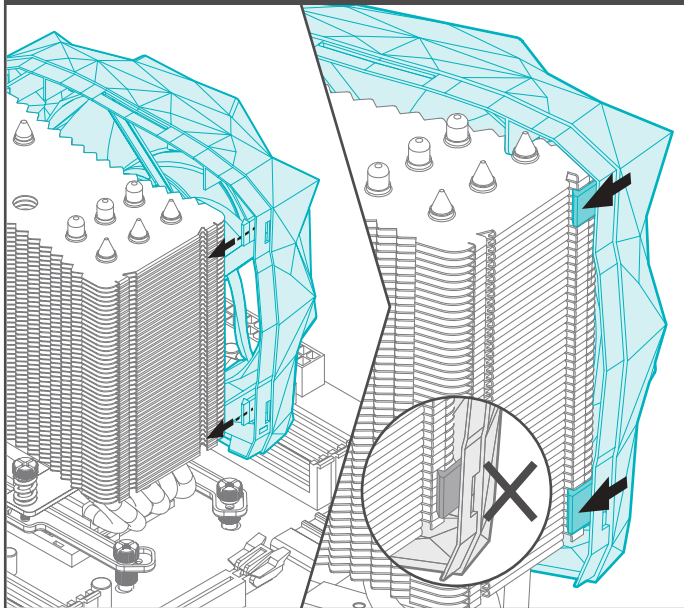

Step 7

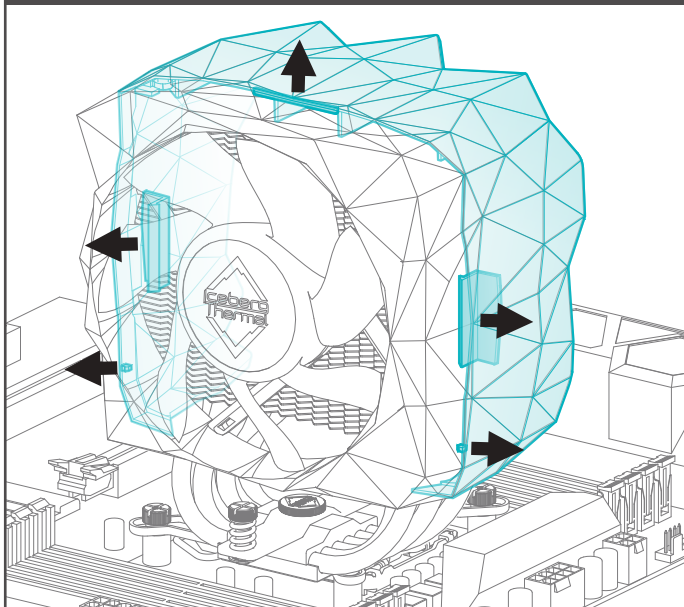

Step 8

