




IceSLEET® G6 Stealth

Quick Start Guide

Iceberg-Thermal.com


Box Content

A

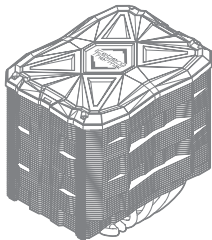

x1

B

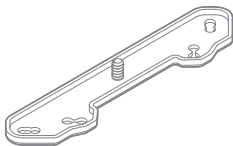

x2

C



x4

D




x4

E



x1

F



x1

G




x1

Box Content


AMD

H

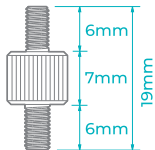

x 4


I

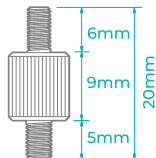

x 4


INTEL

J

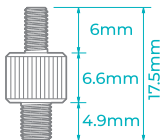

x 4

K

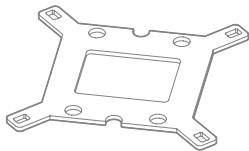

x 1

L



x 4

M



x 4

N



x 4

AMD

AM4


B



D




H

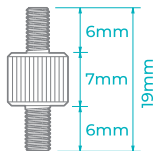

AM3(+) / AM2(+) / FM2(+) / FM1


B

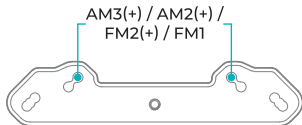

D




I

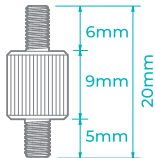


AMD


AM4

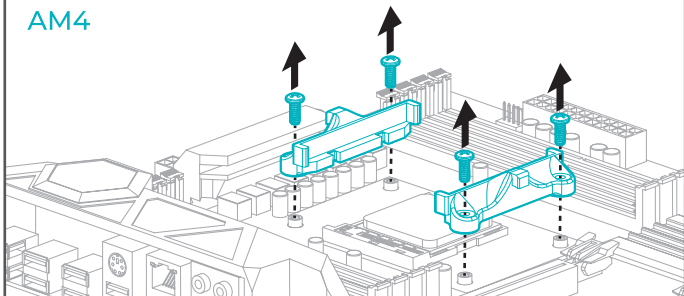

AM3(+) / AM2(+) / FM2(+) / FM1


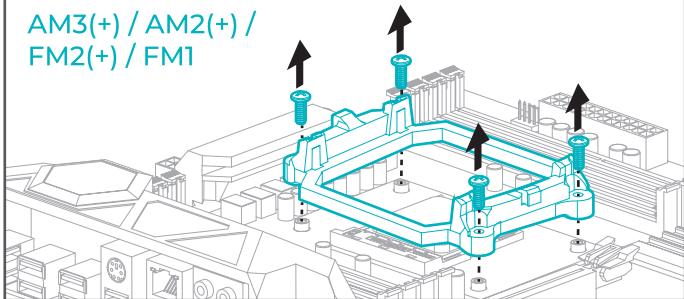


AMD


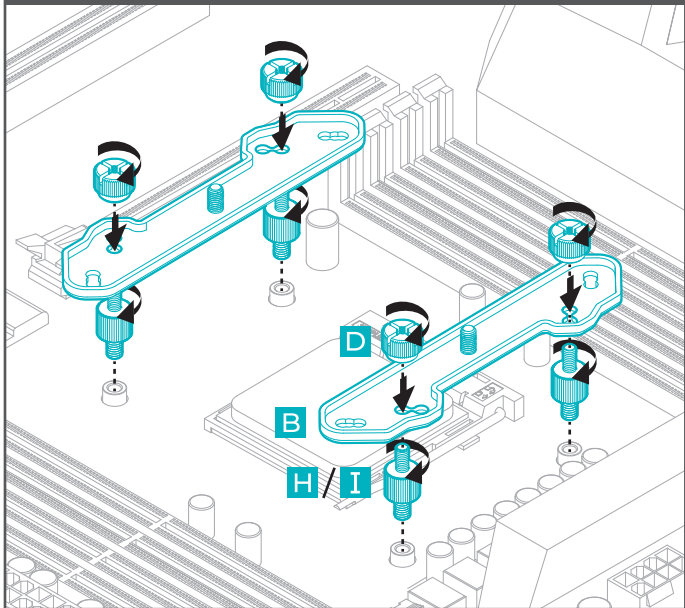


INTEL

LGA 2066 / 2011-0 / 2011-3 (Square ILM)

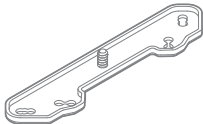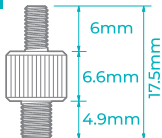B**D****J**

LGA 1700 / 1200 / 115X

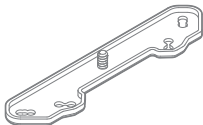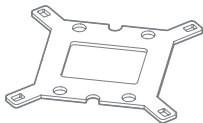
B**D****K****L****M****N**

INTEL

B




K

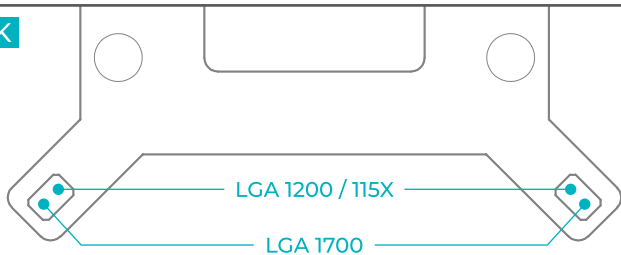


INTEL

LGA 2066 / 2011-0 / 2011-3 (Square ILM)

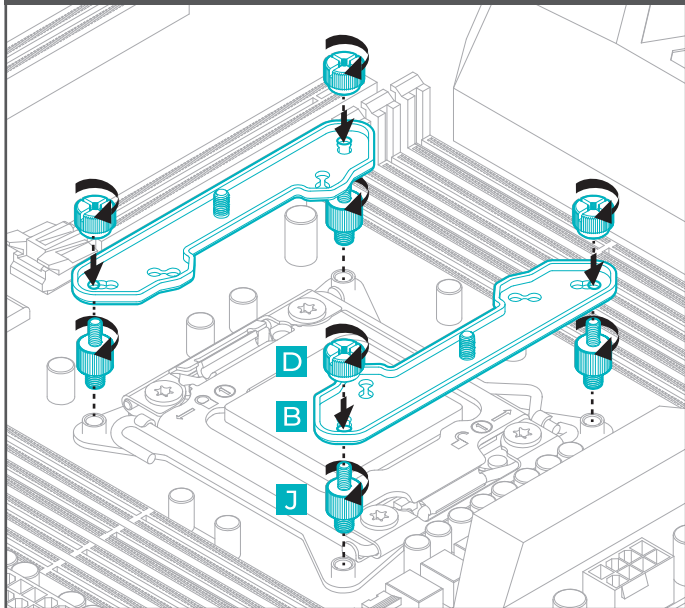


INTEL

LGA 1700 / 1200 / 115X

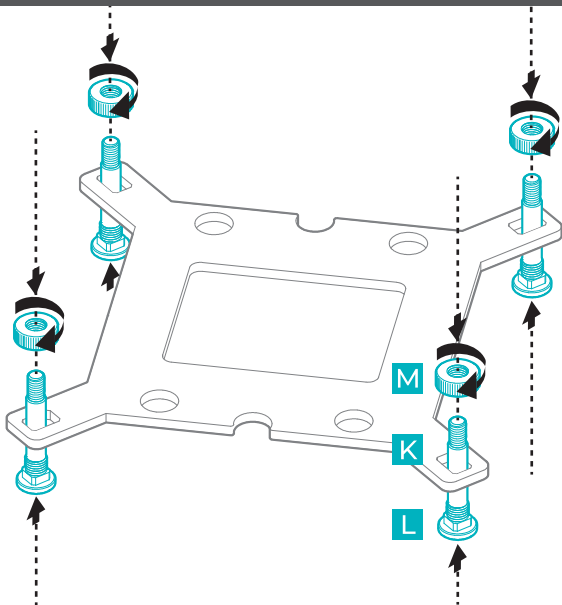


INTEL

LGA 1700 / 1200 / 115X

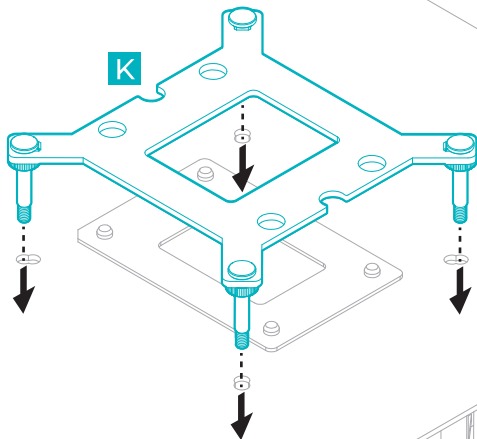


INTEL



LGA 1700 / 1200 / 115X

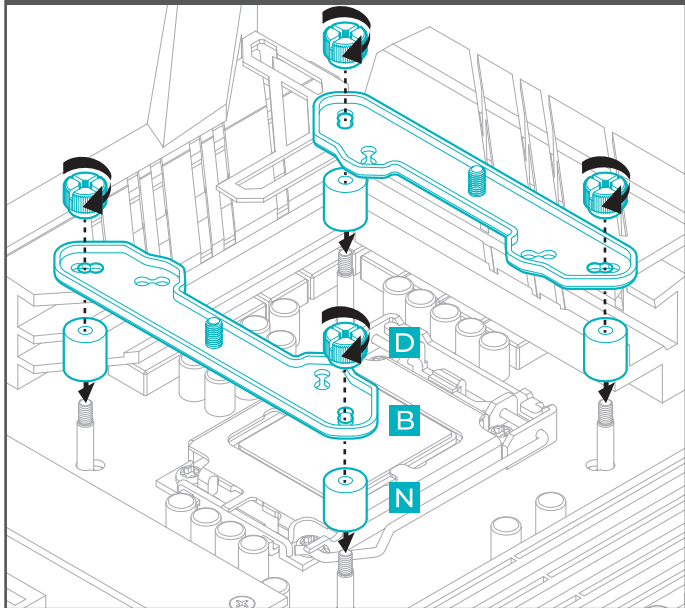


Step 1

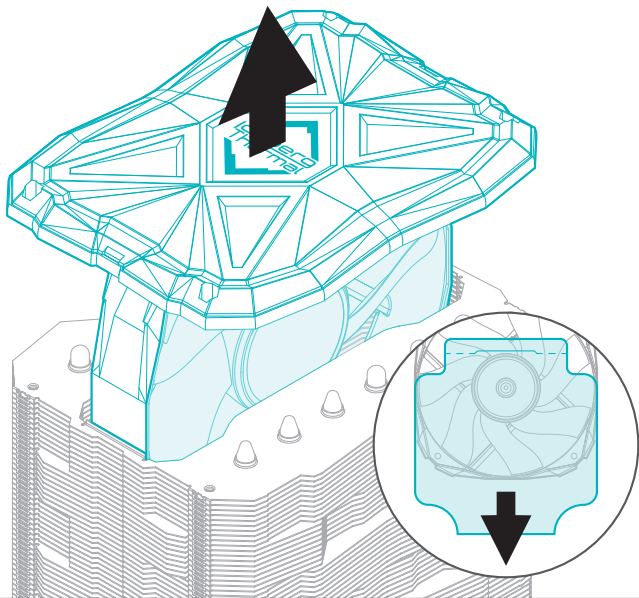


Step 2

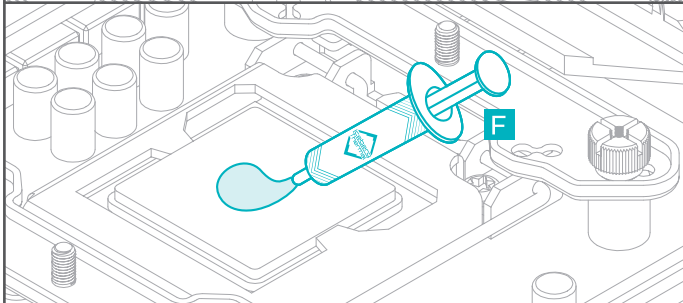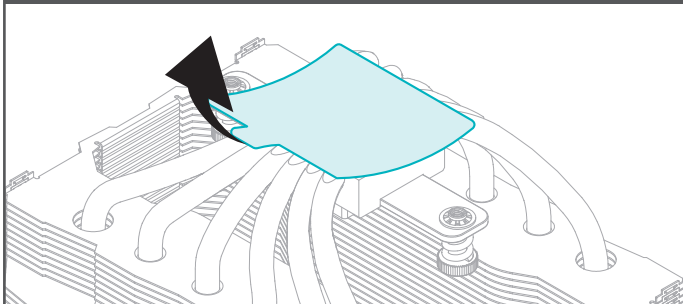


Step 3

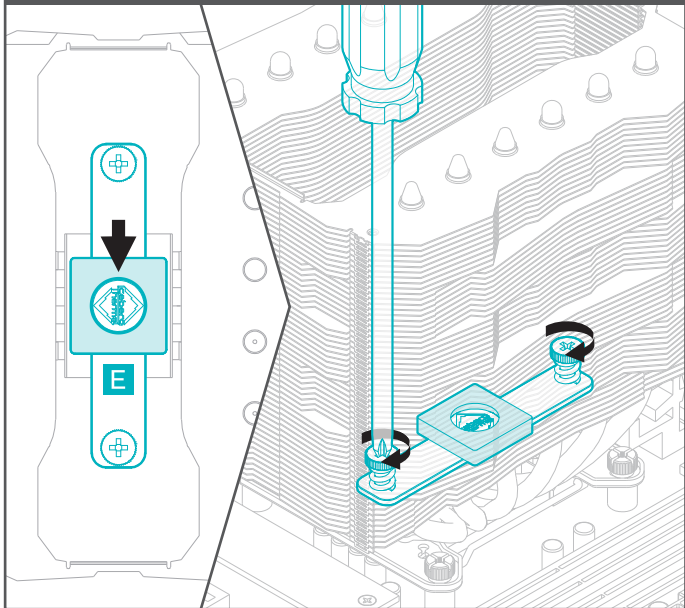

Step 4

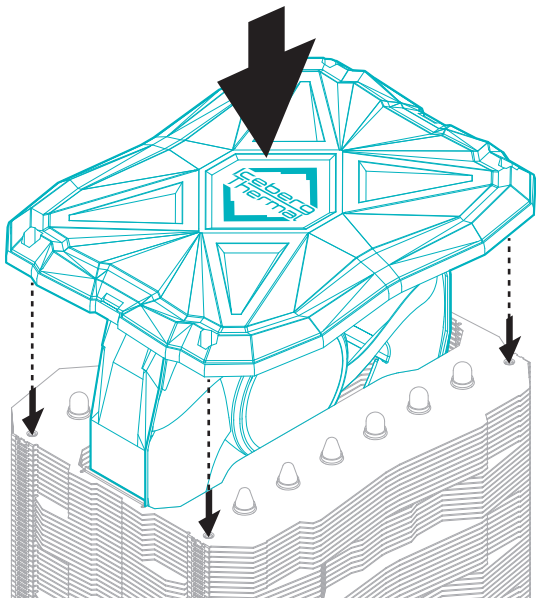

Step 5

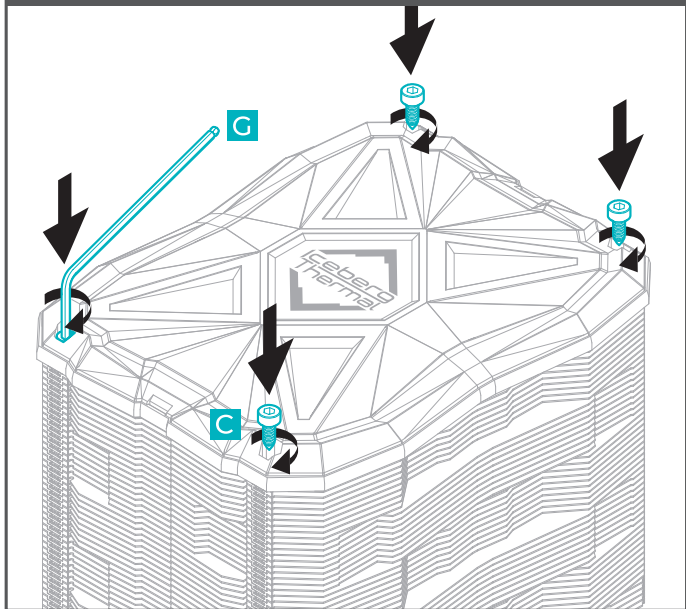

Step 6

