




IceSLEET[®] G6 Stealth

Quick Start Guide

Iceberg-Thermal.com


Box Content

A

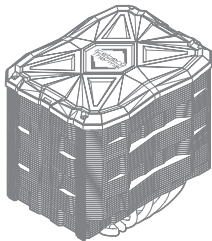

x1

B

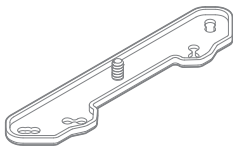

x2

C



x4

D




x4

E




x1

F



x1



G





x1

Box Content

AMD

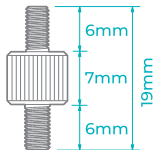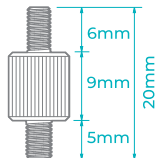
H**x 4****I****x 4**

INTEL

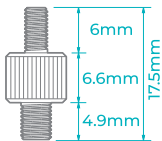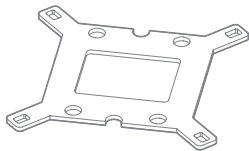
J**x 4****K****x 1****L****x 4****M****x 4****N****x 4**

AMD

AM4

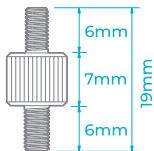
B**D****H**

AM3(+)/AM2(+)/FM2(+)/FM1

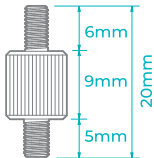
B**D****I**

AMD


AM4

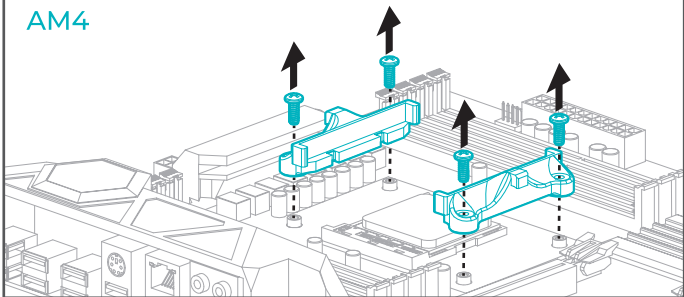

AM3(+) / AM2(+) / FM2(+) / FM1


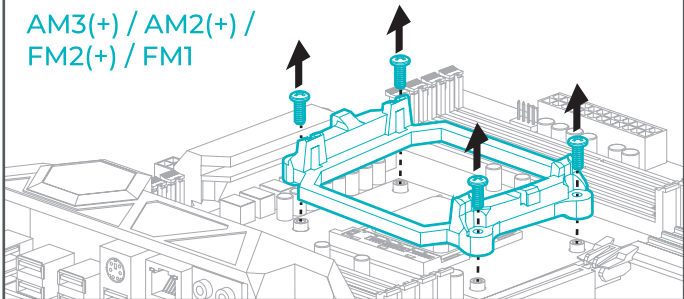


AMD


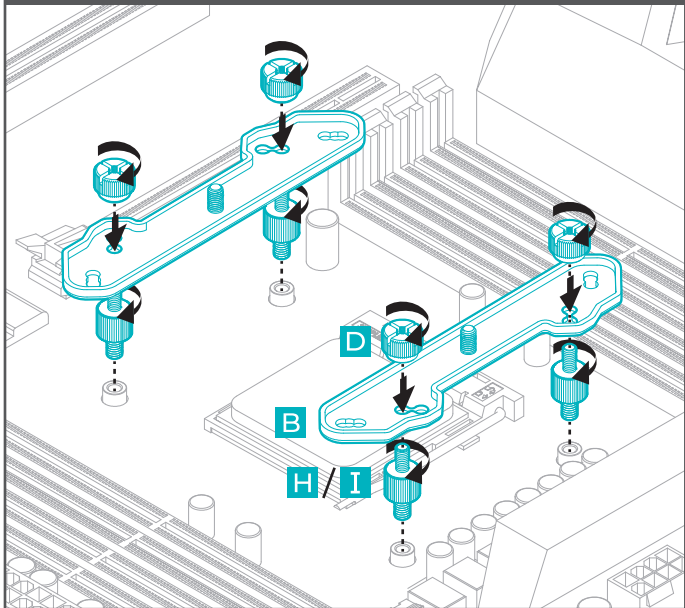


INTEL

LGA 2066 / 2011-0 / 2011-3 (Square ILM)

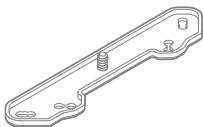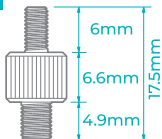B**D****J**

LGA 1700 / 1200 / 115X

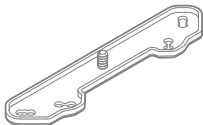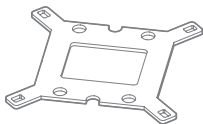
B**D****K****L****M****N**

INTEL

B




K

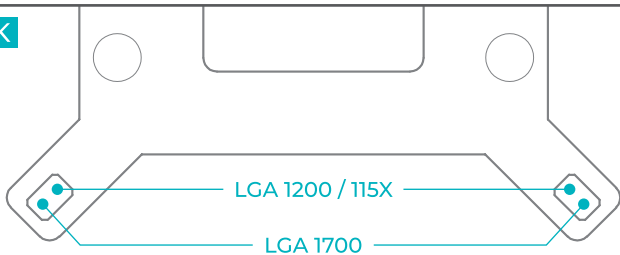


INTEL

LGA 2066 / 2011-0 / 2011-3 (Square ILM)

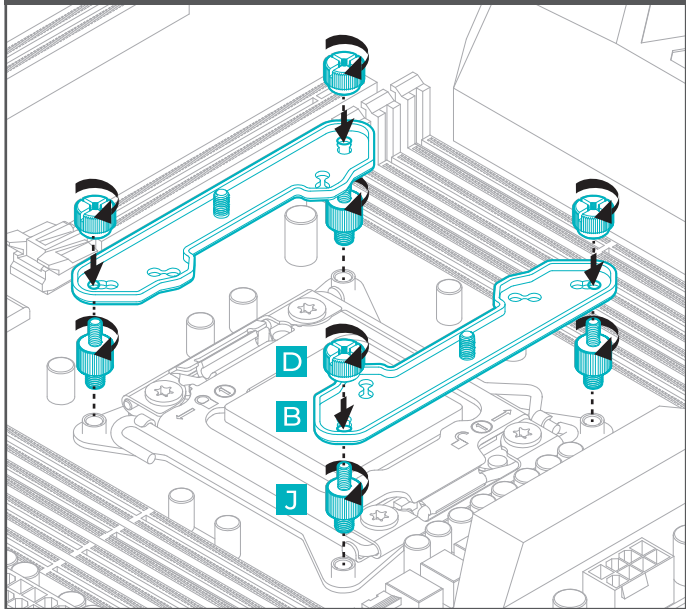


INTEL

LGA 1700 / 1200 / 115X

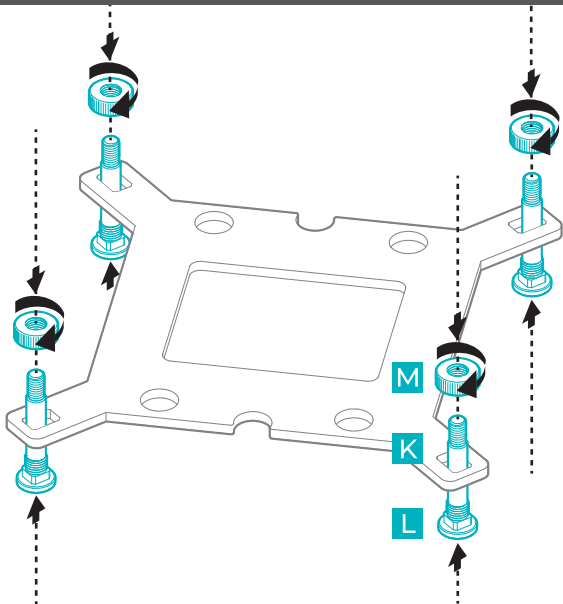


INTEL

LGA 1700 / 1200 / 115X

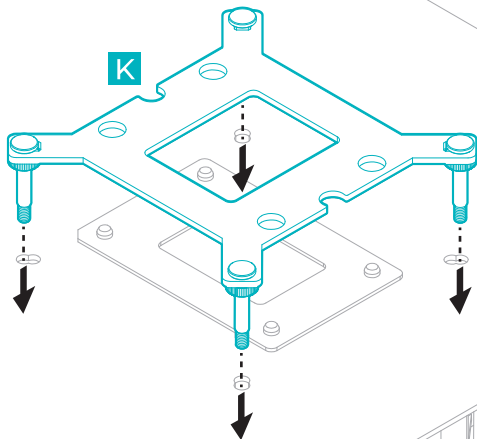


INTEL



LGA 1700 / 1200 / 115X

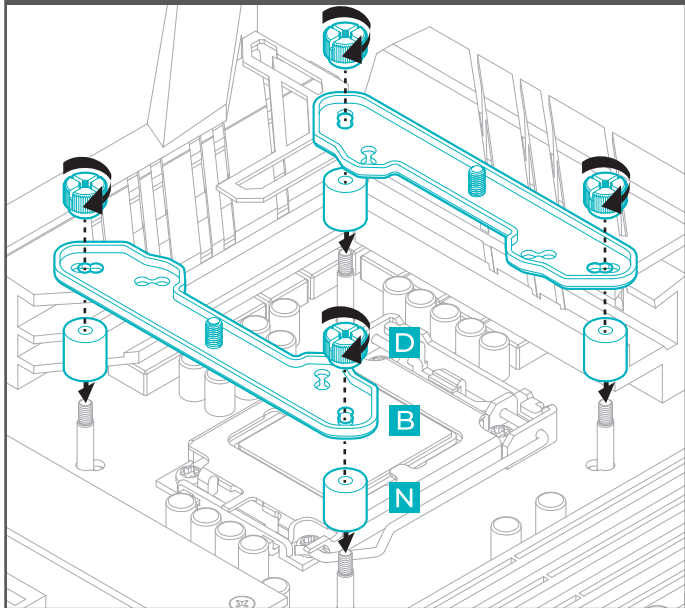


Step 1

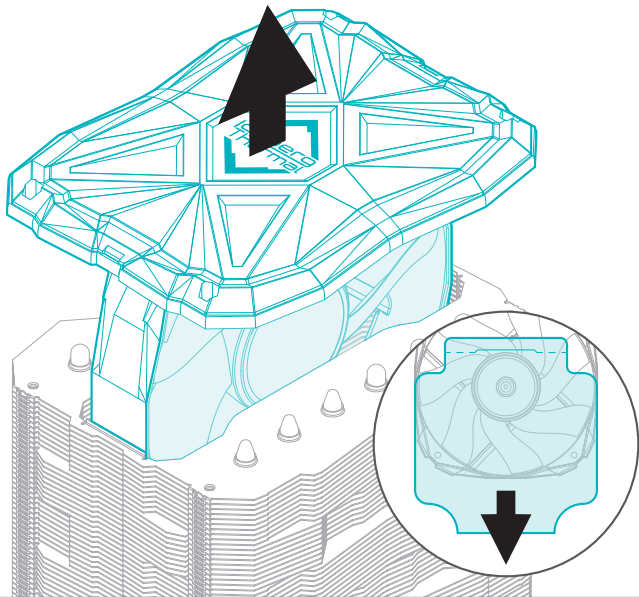


Step 2

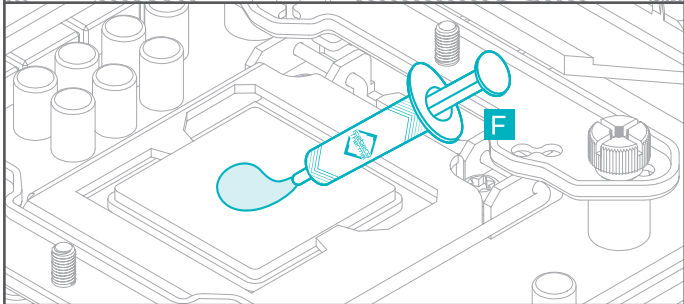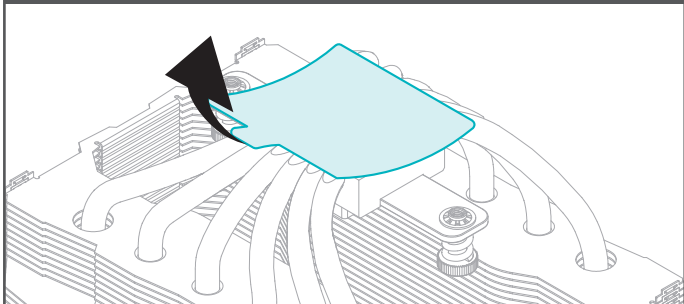


Step 3

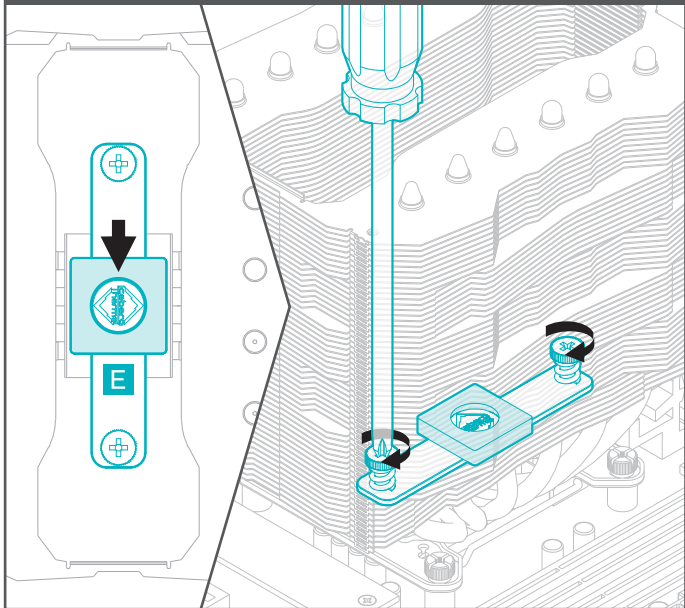

Step 4

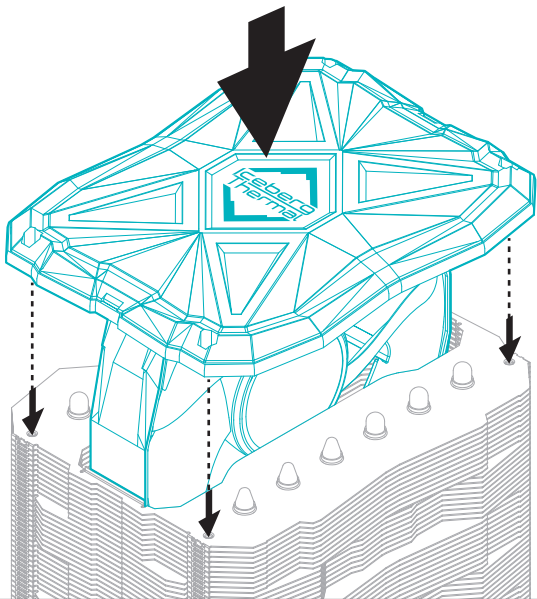

Step 5

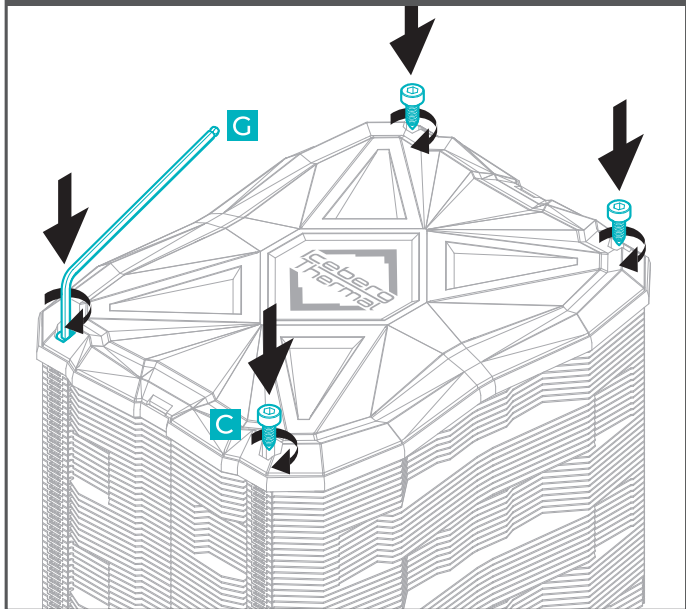

Step 6

